

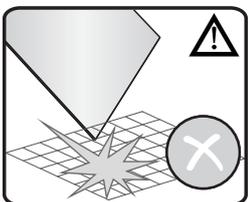
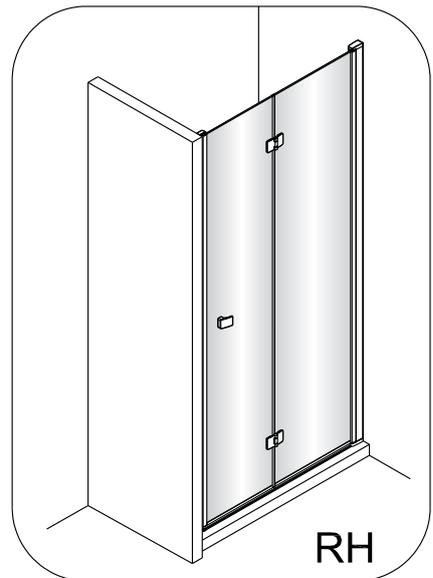
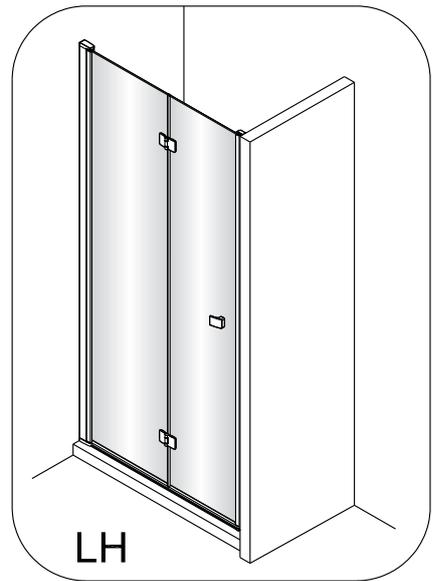


QXV90X + QXP01X Instruction Manual


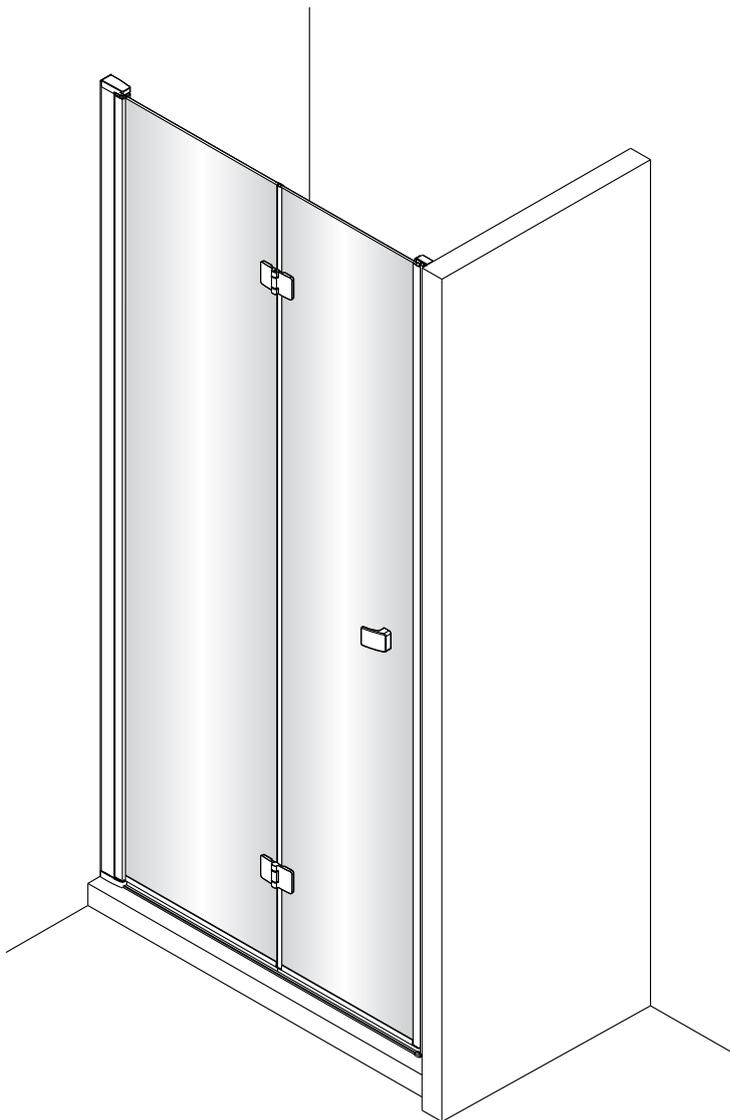


CAUTION! Tempered glass, handle with care!

No collision to the four corners in case of crazing.

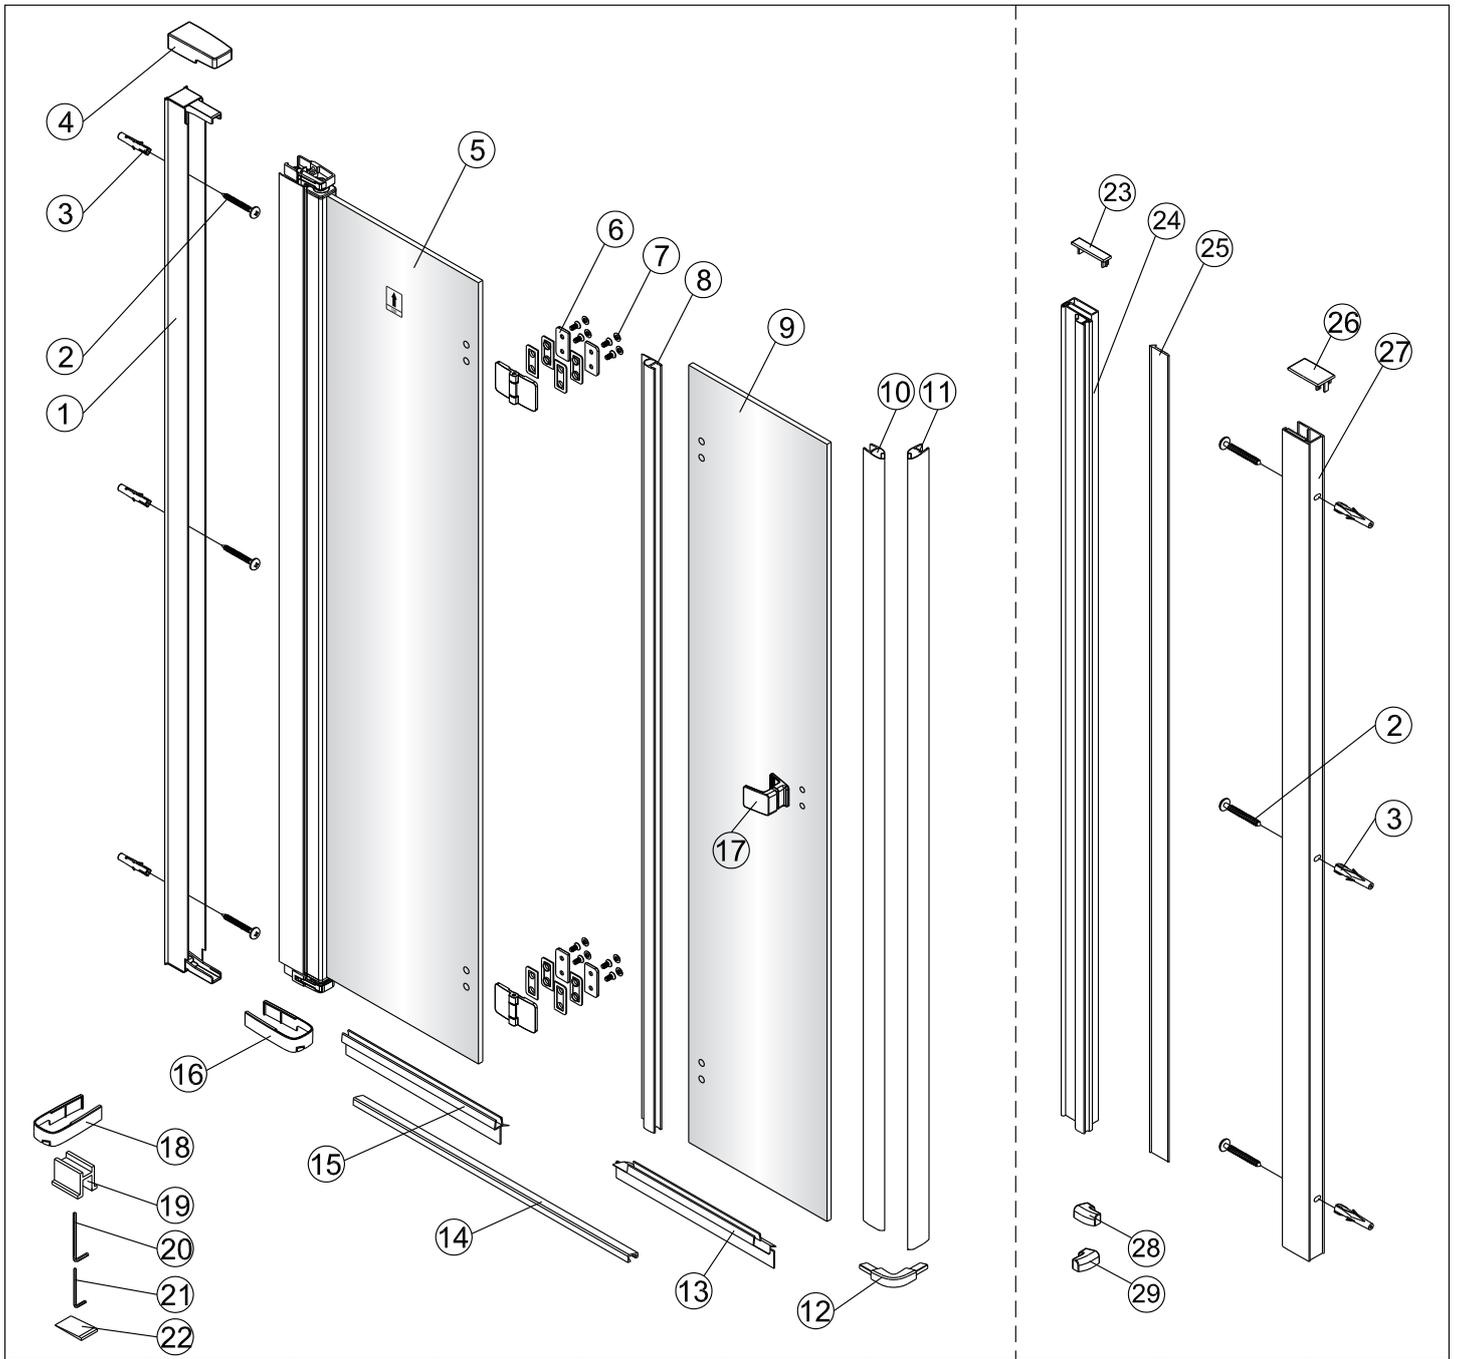


1 1X	2 3X ST4X40	3 3X	4 1X	5 1X	6 2X		23 1X	24 1X	25 1X
7 8X	8 1X	9 1X	10 1X L=1914	11 1X	12 1X		26 1X	27 1X	28 1X
13 1X	14 1X	15 1X	16 1X	17 1X	18 1X		29 1X		
19 2X	20 1X 4mm	21 1X 3mm	22 4X	 Ø6.0mm					

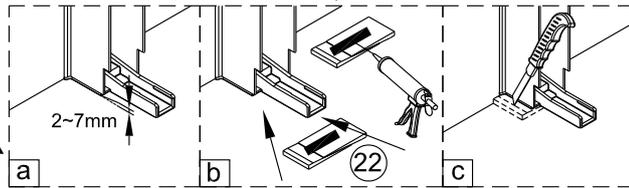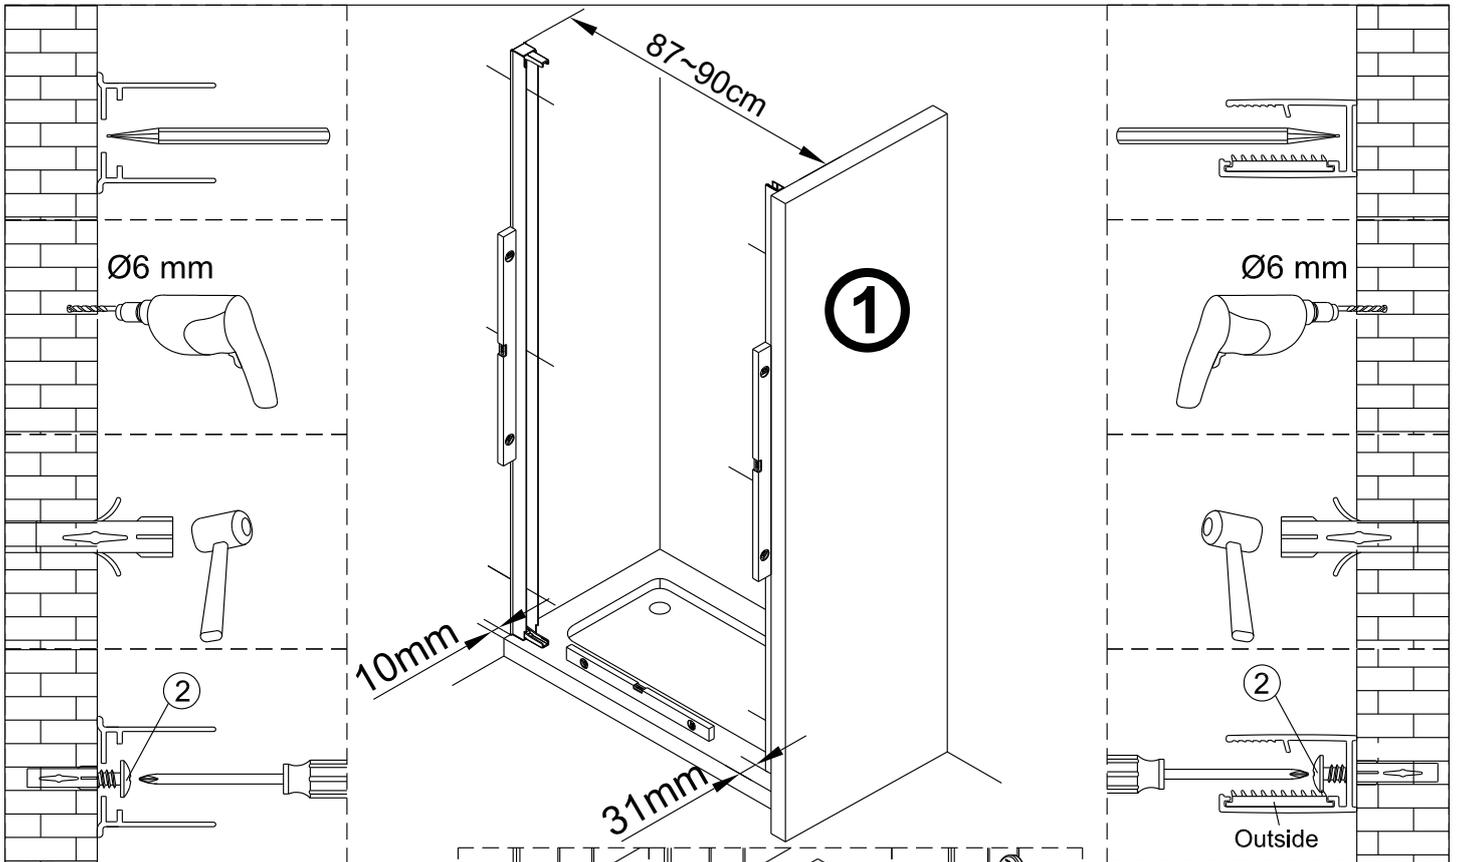




The setting wedge (No.22) will be needed if the profile is not level in 2-7mm.

Put silicone on the two wedges and place them under the profile to level the profile.



Cut the redundant part along the rim of profile.

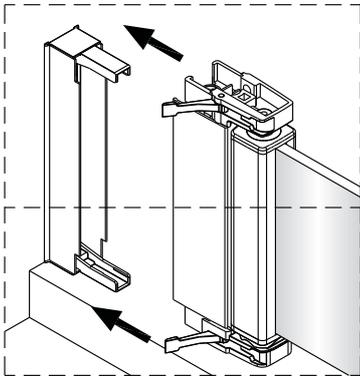





②

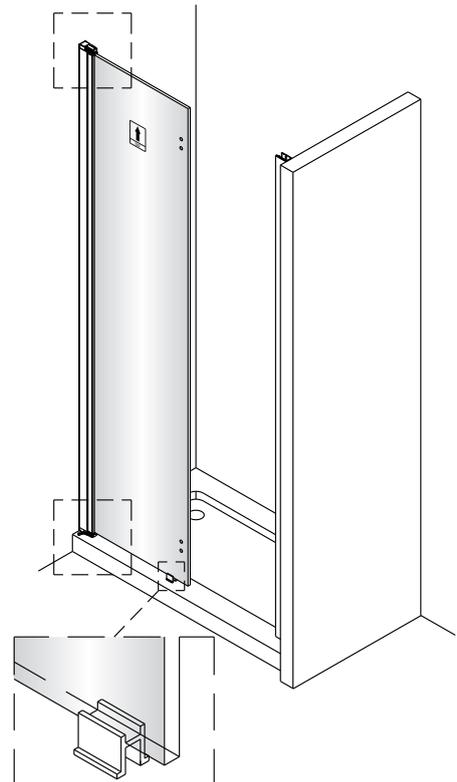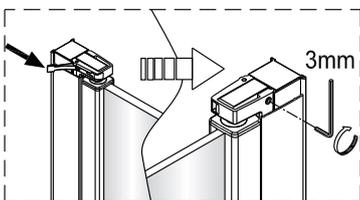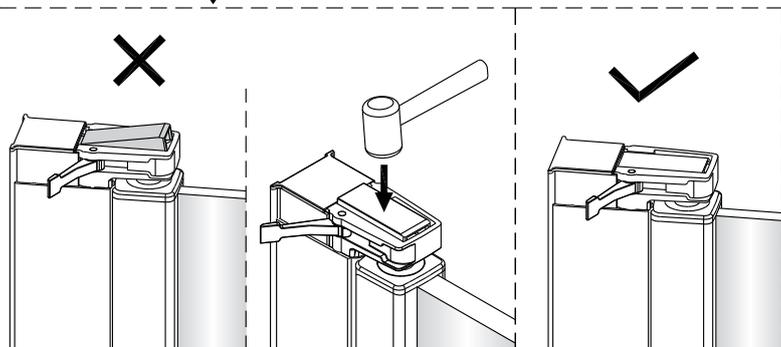







3

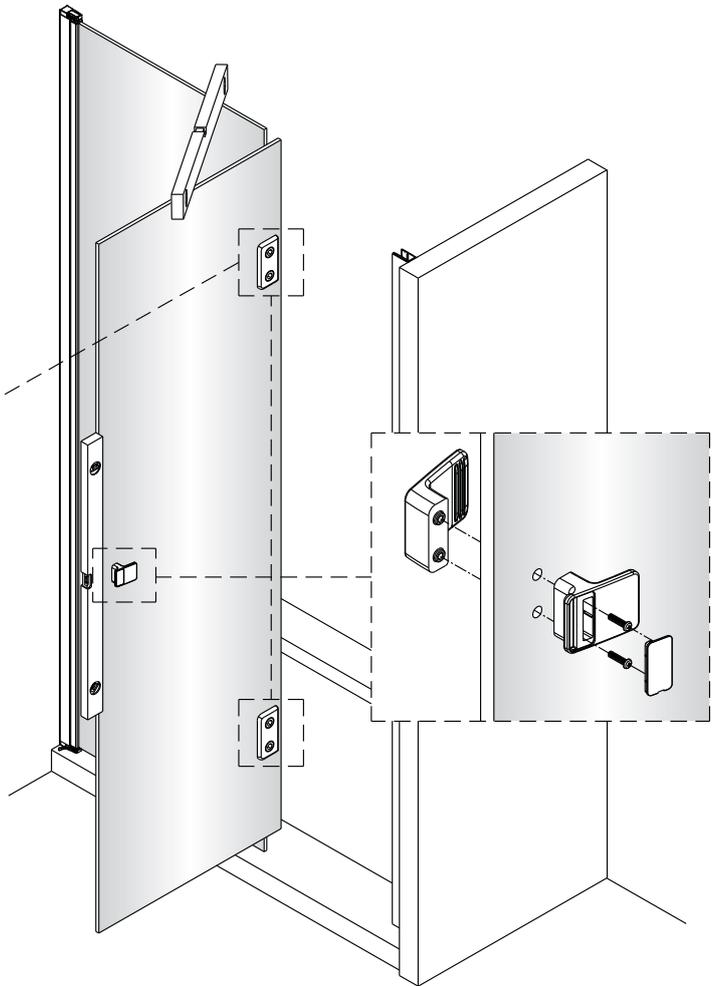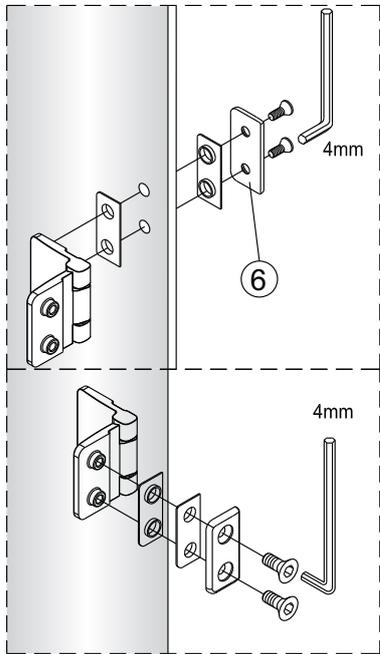

4

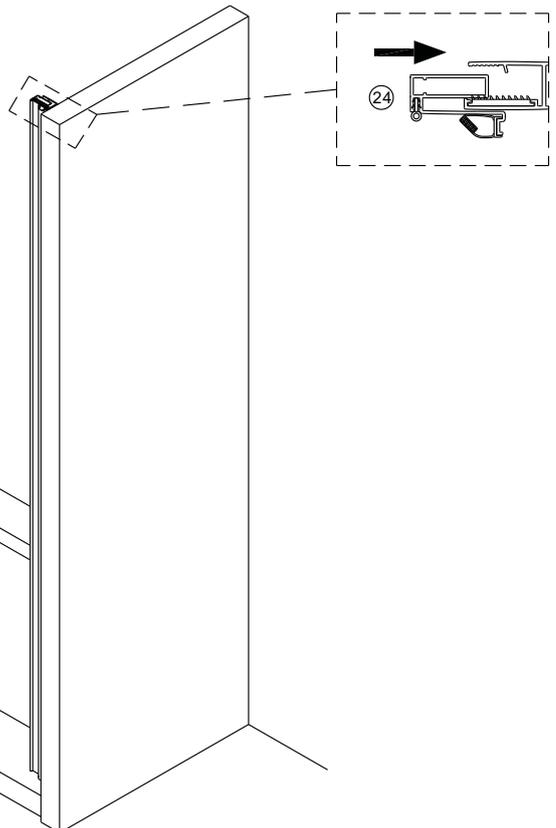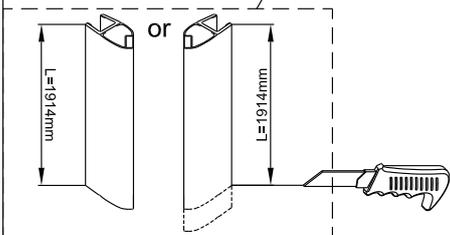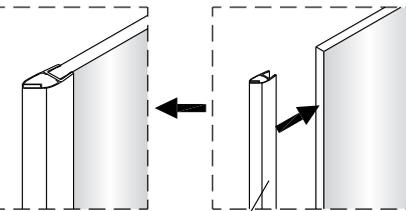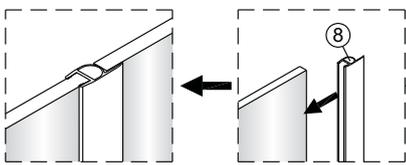

7

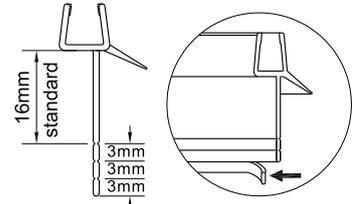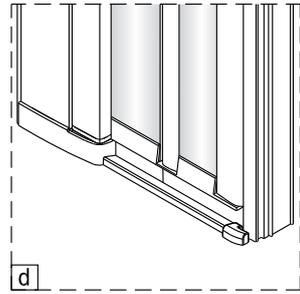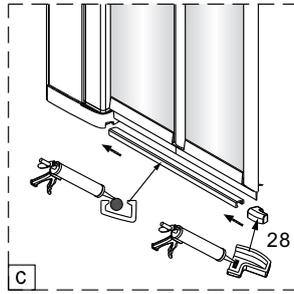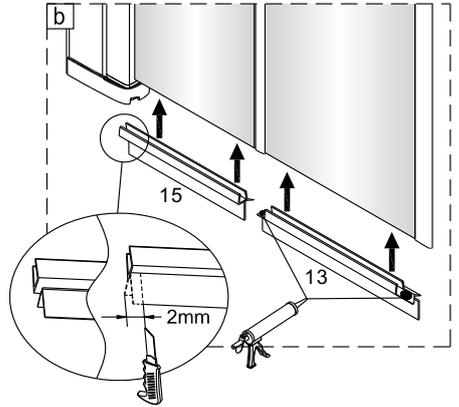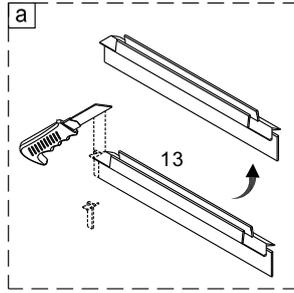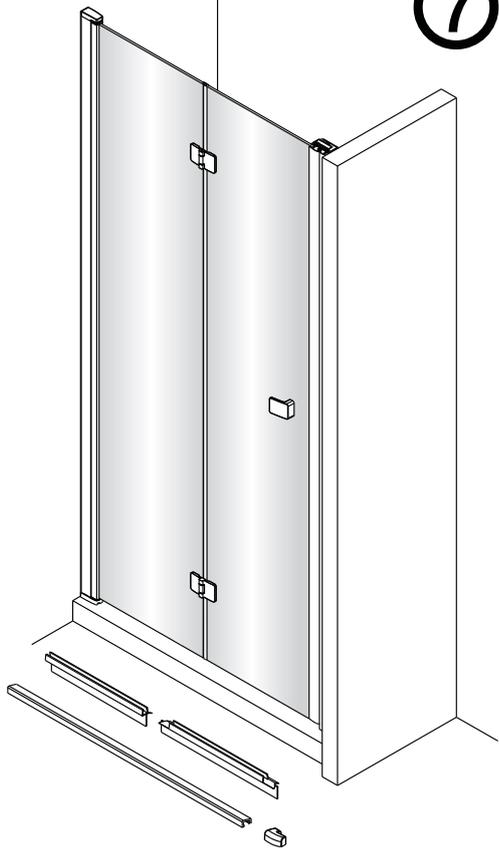

Adjustable curtain could be torn apart as real demand.

8

